



**NOTES:**

1. When the vehicle is used under severe driving conditions,\*\* the engine oil and filter should be changed every 3,750 mi (6,000 km) or 3 <sup>3</sup>/<sub>4</sub> months. All turbo charged vehicles are considered to be operated under severe driving conditions.
2. When the vehicle is used in extremely cold or hot weather areas, contamination of the filter may occur and filter replacement should be performed more often.
3. When the vehicle is frequently operated under severe driving conditions, replacement should be performed every 15,000 mi (24,000 km).
4. When the vehicle is frequently operated under severe driving conditions, replacement should be performed every 15,000 mi (24,000 km).
5. When the vehicle is used in high humidity areas or in mountainous areas, change the brake fluid every 15,000 mi (24,000 km) or 15 months, whichever occurs first.
6. When the vehicle is used under severe driving conditions,\*\* inspection should be performed every 7,500 mi (12,000 km) or 7 <sup>1</sup>/<sub>2</sub> months, whichever occurs first.
7. This inspection is not required to maintain emission warranty eligibility and it does not affect the manufacturer's obligations under EPA's in-use compliance program.
8. When the vehicle is used in extremely dusty conditions, the air cleaner element should be replaced more often.
9. The ATF filter is a maintenance free part. The ATF filter needs replacement only when it has physical damage or if the ATF has leaked (5AT only).
10. A tire should be replaced when the tread wear indicator appears as a solid band across the tread; this occurs when the remaining tread has worn to 0.063 in (1.6mm) or less.
11. Periodic inspection and replacement of the camshaft drive chains on the 3.0 Liter and 3.6 Liter models are not required.
12. To prevent cooling system leaks, always add Genuine SUBARU Cooling System Conditioner whenever the coolant is replaced.
13. A/C Filter replacement intervals: Impreza - 12 months/7500mi (12,000 km); Forester - 12 months/7500 miles (12,000 km); Legacy/Outback - 12 months/9300 miles (15,000 km); Tribeca - 15 months/15,000 mi (24,000 km).
14. Subaru Super Coolant 1st replacement interval is 11years/137,500 miles (220,000 km). 2nd replacement interval is 6 years/ 75,000 miles (120,000 km) after the 1st.

**\*\*EXAMPLES OF SEVERE DRIVING CONDITIONS:**

- a. Repeated short distance driving. (Items 3, 13 and 14 only)
- b. Driving on rough and/or muddy roads. (Items 13, 14 and 17 only)
- c. Driving in dusty conditions.
- d. Driving in extremely cold weather. (Items 3 and 17 only)
- e. Driving in areas where road salts or other corrosive materials are used. (Items 6, 13, 14, 15 and 17 only)
- f. Living in coastal areas. (Items 6, 13, 14, 15 and 17 only)
- g. Towing a trailer. (Items 3, 4, 10, 11, 13 and 14 only)